



DYNA-KING, INC.
World's finest handcrafted flytying vises


CENTERING GAUGE INSTRUCTIONS

First install the hook into your vise jaw, then put the centering gauge on the angled shaft (Spindle) and press down until you hear it snap into position.

You can adjust the body to align the shank of the hook with the pin of the centering gauge by loosening the slide lock screw. When the hook shank is in alignment with the Centering Gauge Pin you may tighten the slide lock screw to lock your vise in position.

You should now be able to spin your hook at the center of rotation

The Centering Gauge can easily be removed so you may enjoy your tying.

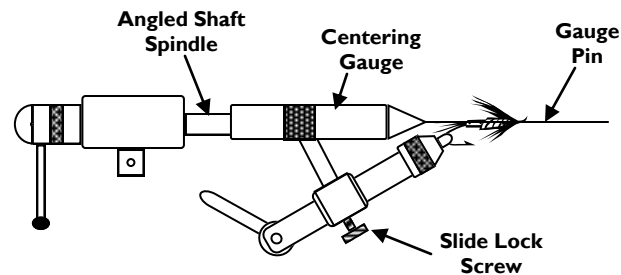

597 SANTANA DRIVE, UNIT A • CLOVERDALE, CA 95425, USA
TOLL FREE (800) 396-2546 • (707) 894-5566 • FAX (707) 894-5990
www.dyna-king.com • EMAIL: info@dyna-king.com