




DYNA-KING, INC.®

World's finest handcrafted flytying vises

The OUTRIGGER

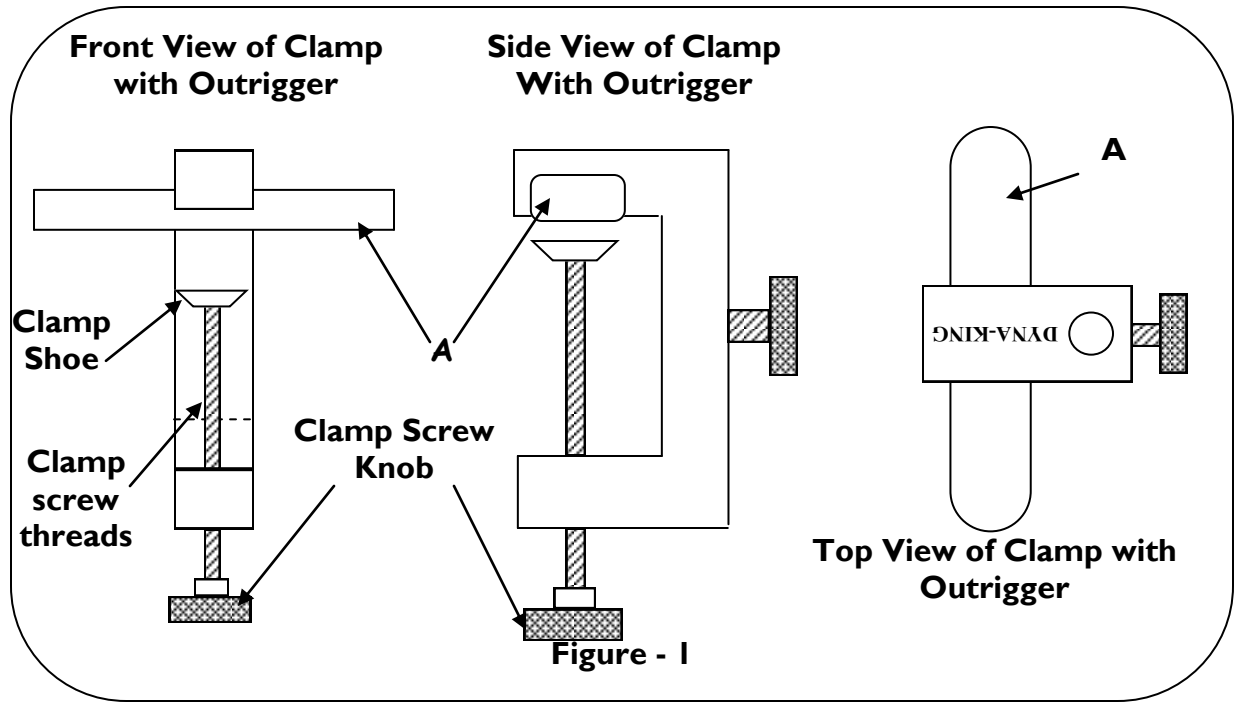

ASSEMBLY INSTRUCTIONS

The **Outrigger**, **Figure 2** is used to obtain the greatest degree of stability for your **Clamp** vise. The **Outrigger** is shown in the diagrams as "A". Place the **Outrigger** beneath the upper arm of the **Clamp Base** as indicated by the arrows in **Figure 3**. Holding the **Outrigger** and **Clamp Base** together with one hand, slip the assembly over the edge of your tying bench or table. With your other hand, tighten the **Clamp Screw Knob**. The **Clamp** assembly should appear as in **Figure 1**.

